

HEAT-LINK

Boðtækni
Söluaðili á Íslandi

A22+ Introduction

Nánari upplýsingar hjá söluráðgjöfum Boðtækni í síma 554 0500

HEAT-LINK A22+ Basic Functions

- Energy control
- Wireless Intruder Alarm **NEW!!**
- Power line monitoring
- Temperature monitoring
- Anti freeze alarm
- Fire warning
- Status check



HEAT-LINK A22+ Key Features

- Built in back-up power
- Alert to up to 8 telephone numbers
- Plug & play
- Programmable functions
- Remote programming over internet and Smartphone app

HEAT-LINK A22+ Target Applications

- Cabins
- Campers
- Caravans
- Mobile Homes
- Mobile Catering
- Mobile Sales Offices
- Office Modules
- Storage Containers



HEAT-LINK A22+ Wireless Inputs

- 6 wireless zones
- Factory pre programmed (can be altered)
- Zone 1: entry zone with delay
- Zone 2–5: generic zones IR, magnetic contacts.
- Zone 6: Preprogrammed for fire warning
- 5 remote controllers



**How to start up
HEAT-LINK A22+**

Quick start Guide

HEAT-LINK A22+ Factory Setup Commands

*Also available by Internet app or
Smartphone app

- A22!!01 = Factory setup Swedish language
- A22!!02 = Factory setup English language
- Basic set-up with housecode "A"
- 3 temperatures +20, +10 & +5 degrees
- Heaton regulation starts at +20 off at +22
- Termon regulation starts at +10 off at +12
- Freeze alarm at +5
- Retrieves Your phone number and adds it to alarm list

HEAT-LINK A22+ Adding remote controllers

- Maximum 5 remotes can be added
- Remove or add remotes at any time
- Done by SMS command, PC or internet
- All remotes have a unique 9 digit number
- Enter the number and the programming is finished
- Fast, simple and reliable



HEAT-LINK A22+ Adding remote controllers

- Remote!*01, Programming command
- Remote!*01,123456789* (number fom the back)
- System returns with all programmed remotes
Remote**01,123456789*02,000000000*03,000000000*04,000000000*05,000000000*
- Remote?? Ask for programmed remotes
- Delete remote, just overwrite with Remote!*01,000000000*

HEAT-LINK A22+ Adding alarm sensors

- Maximum 6 alarm devices can be added
- Remove or add remotes at any time
- Done by SMS commad, PC or internet
- All sensors have a unic 9 digdit number
- Enter the number and the programming is ready
- Fast, simple and reliabel



HEAT-LINK A22+

Adding Alarm Sensors

- Sensor!*01, Programming command
- Sensor!*01,123456789* (from the back or inside the sensor)
- System returns with all programmed sensors
- Sensor**01,123456789*02,000000000*03,000000000*04,000000000*05,000000000*
- Sensor?? Ask for programmed sensors
- Delete sensor, just overwrite with Sensor!*01,000000000*